



QUICK GUIDE **AT**



acoem

1





2



Horizontal Shaft Alignment



3

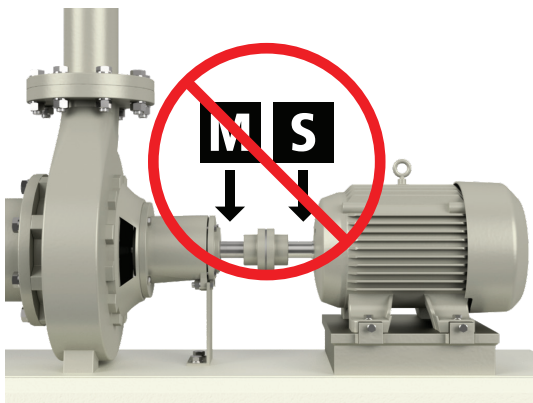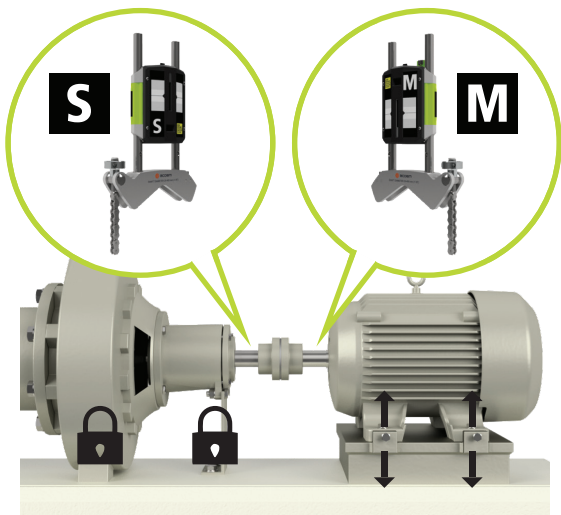

4



5




6




7




8

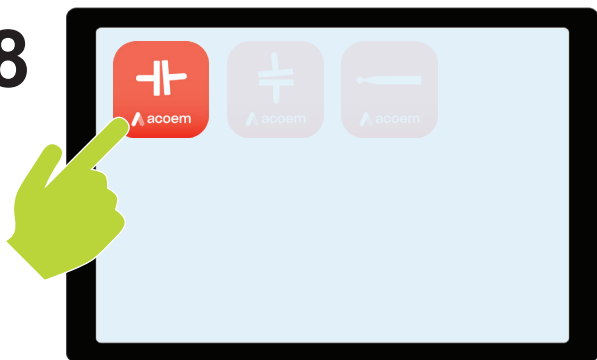

9

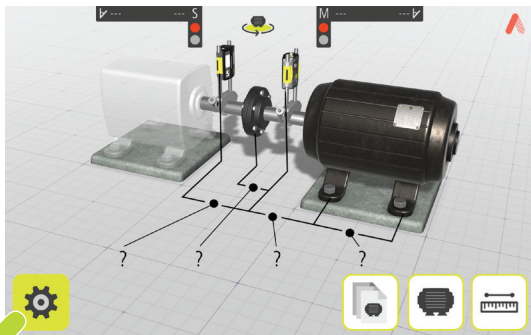

10

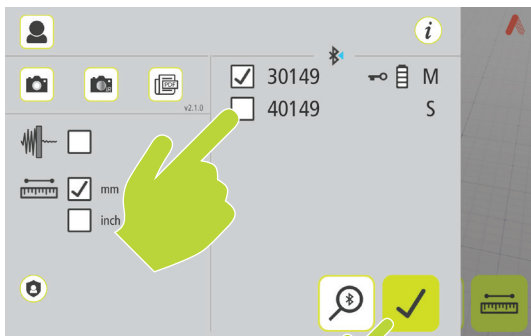

11



1




2




3




12

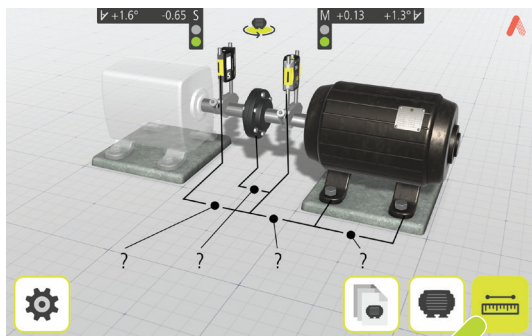


13

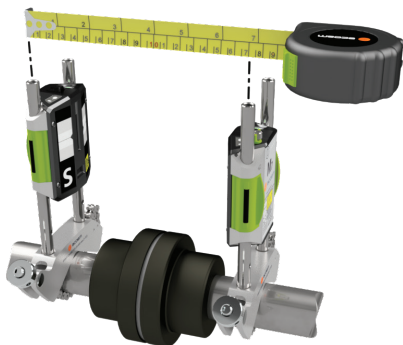


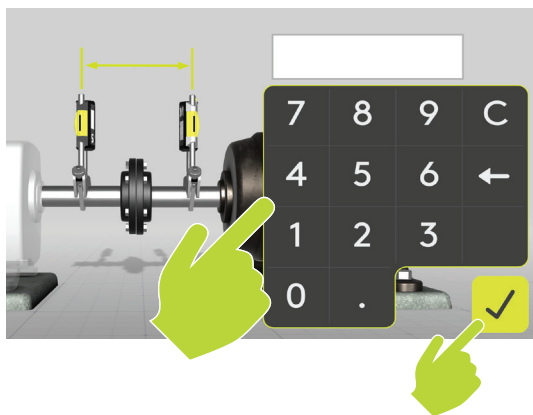


14

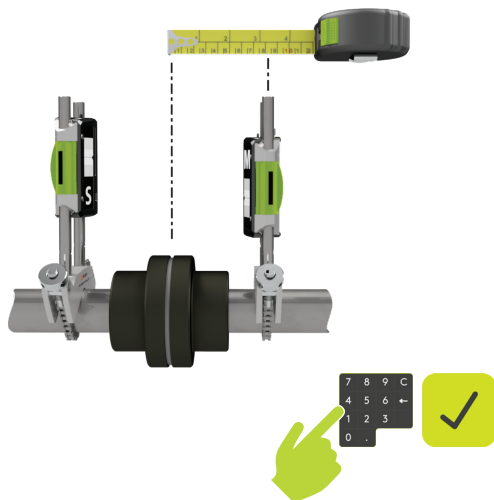


15

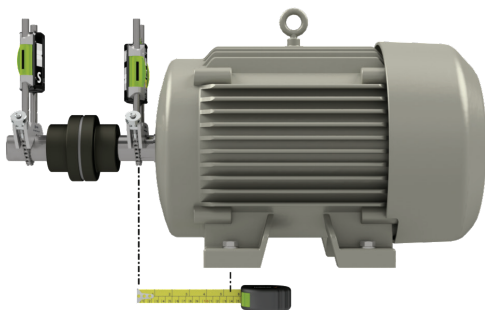

16

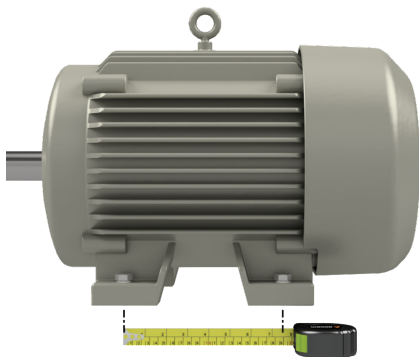

17

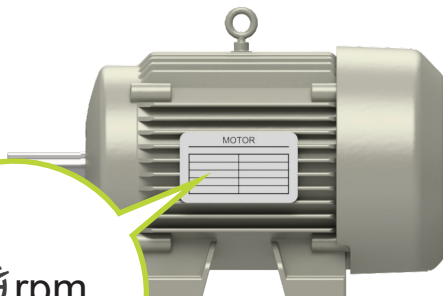


	rpm	$\pm$ mm/100	$\pm$ mm
☐	0-2000	0.08	0.10
☒	2000-3000	0.07	0.07
☐	3000-4000	0.06	0.05
☐	4000-6000	0.05	0.03





18


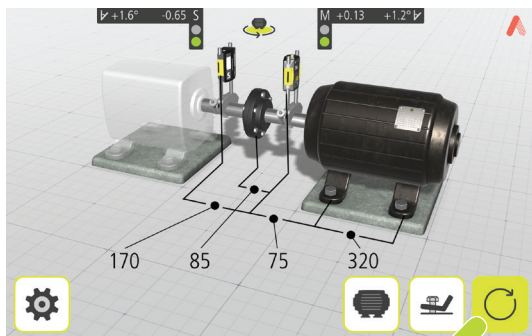




19





20

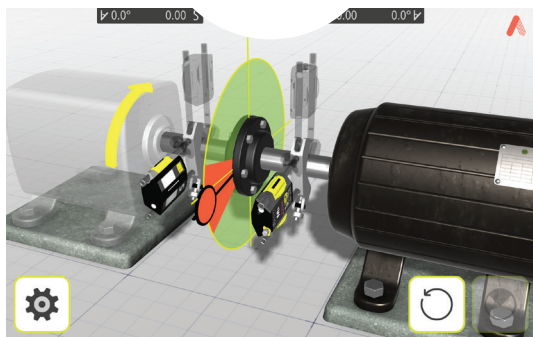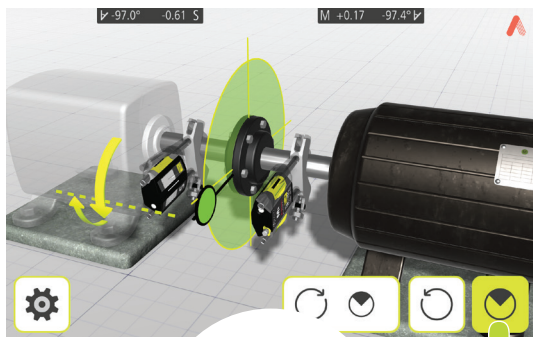


21




22

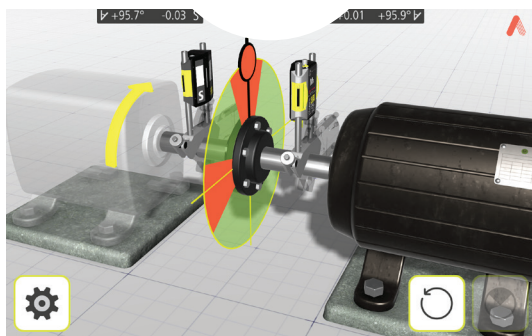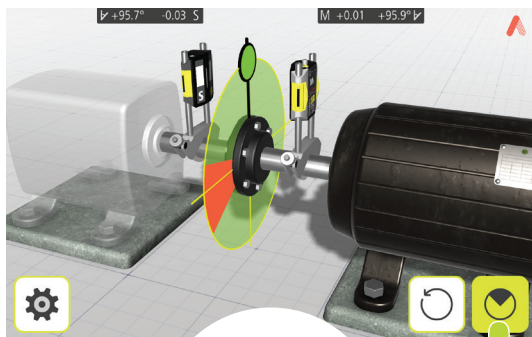


23

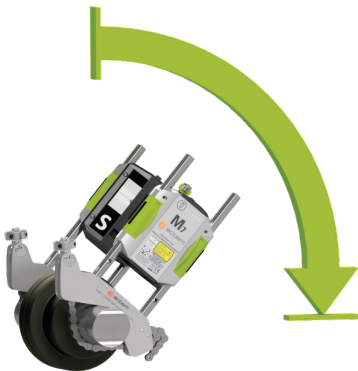


24

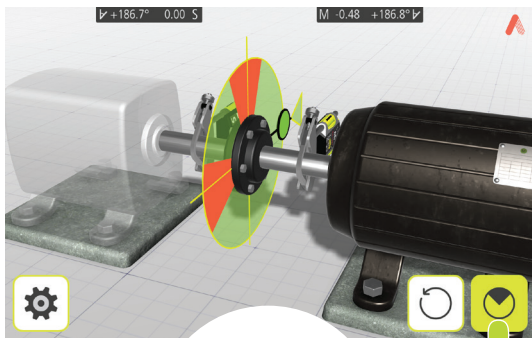

25

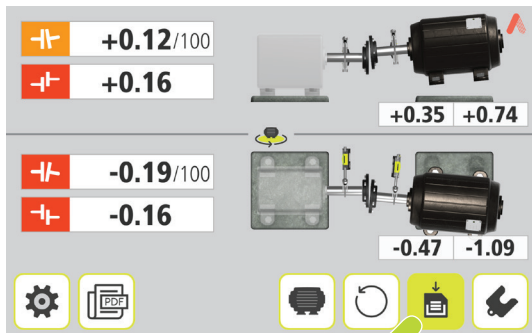

26

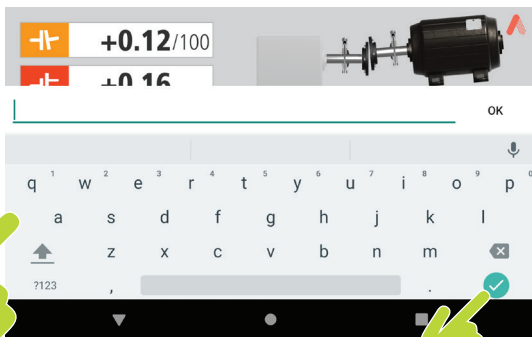

27




→ 28



28


A

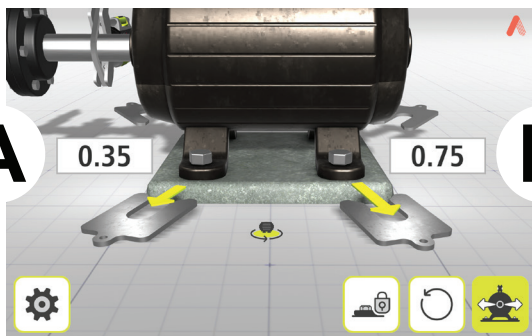


B

29

4x

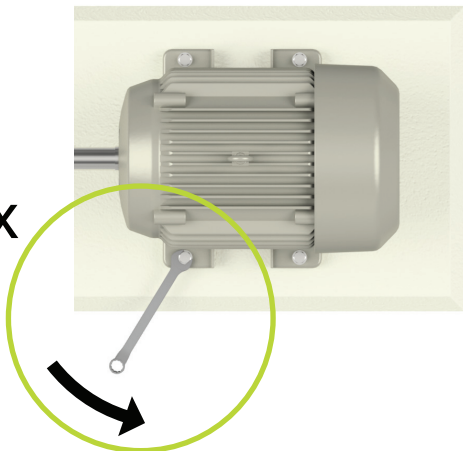


30

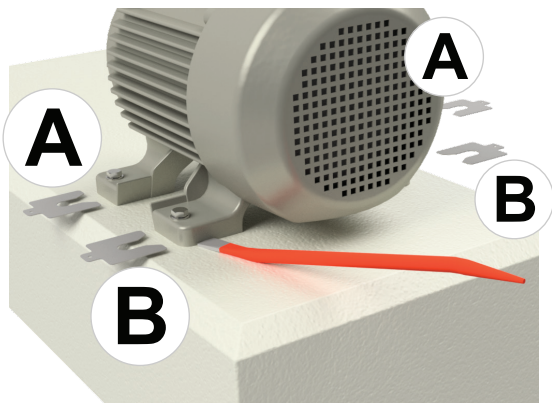


31




32

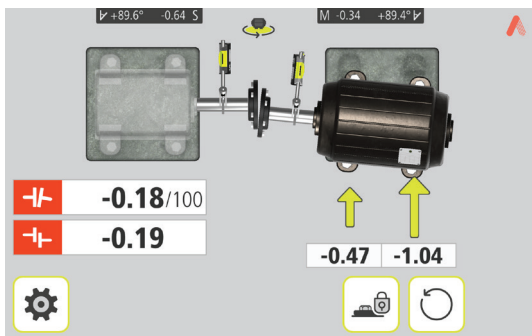


33

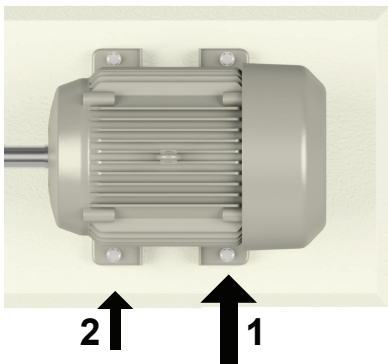

34

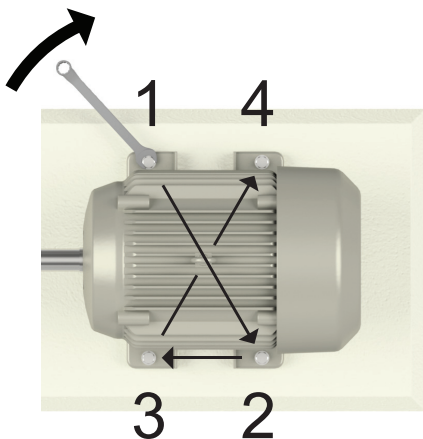

35

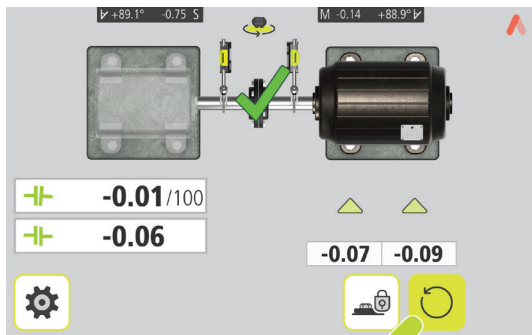

36 ➡ **18 - 27**



www.fixturlaser.com/downloads/manuals



www.youtube.com/user/FIXTURLASER



acoem

CREATING ENVIRONMENTS OF POSSIBILITY

ACOEM SWEDEN

Box 7, SE - 431 21 Mölndal, SWEDEN

Tel: +46 31 706 28 00 - info@acoem.com

acoem.com



P-0346 QUICK GUIDE AT